

SB300 Scoreboard Controller Quick Start Guide

Selecting a Preset [**SETUP**]

- From the operating screen press the blue *SETUP* button. To prevent settings being changed mid game, this button is only available when the game has been reset, or on power up.
- Press the *PRESET* button. The page for presets 1-10 will be displayed. To select a preset from 11-20 press the *P11-20* button at the bottom right of the screen. The current preset will be highlighted yellow.
- Press the button for the desired preset to select it and then press *OK*. This will return you to the *SETUP OPTIONS* page.
- Press *DONE* to return to the operating screen.

Reset Button [**RESET**]

Pressing the *RESET* button will bring up a screen to select different reset options. Press *Reset Game* to reset the game. The reset button is only available when the game clock is halted.

Extra Time Button [**EXT**]

- The Extra Time (*EXT*) button can only be activated at the end of the final period.
- Pressing the *EXT* button will load the preselected Extra Time Interval onto the game clock.
- Press *START* to start the Extra Time Interval.
- The Extra Time Interval will be followed by the Extra Time Period. At the end of the Extra Time Interval, the game clock will be set to the predetermined Extra Time Period time and wait for the operator to start the clock.
- See section 3.1.2.5 “Extra Time” of the complete manual to find out how to adjust the extra time.

Time Adjust Button [**TIME**]

The time adjust button (*TIME*) allows you to adjust the game time on the fly. The *TIME* button is only available when the game clock is stopped. Game time is adjustable in minute, second and 1/10th second increments.

During a Period:

- Press the *TIME* button.
- Use the keypad to adjust the game clock.
- Press *OK* to accept the changes, or *CANCEL* to return to the operating screen without making any changes.

After a period has ended:

- If the game clock of the period you were in has expired and you have entered a break time, you are able to return to the previous period and adjust the game time clock.
- If the clock is running press *HALT*.
- Press the *TIME* button.
- Press the *JUMP TO PERIOD* button.
- Adjust the period time.
- Press *OK* to accept the changes. The unit will return to the operating screen and revert to the previous period with the time you have selected.